

# Additel 681

## Digital Pressure Gauges



Now IP67 Rated!

- Pressure ranges to 40,000 psi (2,800 bar)
- 0.02%, 0.05%, 0.1%, 0.2% FS or 0.1%RD accuracy
- % pressure indication with fan-shaped graph scale for visual reference
- Fully temperature compensated accuracy
- Panel mount gauges are available
- Intrinsically safe version (681IS)
- Data logging option
- IP67 rated (681IS)



Gauge pressure

Differential pressure

### OVERVIEW

With advanced microprocessor technology and state-of-the-art silicon pressure sensors, the 681 series digital pressure gauges provide an accurate, reliable, and economic solution for a wide range of pressure applications. They are loaded with functionality and remarkably easy to use. To reach the best performance, every silicon pressure sensor in our gauges is specially aged, tested and screened before assembly. At Additel, fully temperature compensated accuracy means every sensor is pressure tested at several environmental temperatures from -10°C to 50°C. With this test data individual coefficients are generated and stored in the gauge characterizing its performance over the full temperature compensated range. And now the ADT681IS comes with an IP67 rating meaning it is dust resistant and water proof, submersible in 1 meter of water.

### Designed to fit your need

Additel pressure gauges give you the widest variety of sensor choices on the market. Whether you require low inches of water measurement or very high pressure measurement, we have a gauge that will meet your need. We offer sensors which are  $\pm 1$  inH<sub>2</sub>O ( $\pm 2.5$  mbar) to 40K psi (2,800 bar) and everything in between.

Do your applications require you to measure both positive and vacuum pressure? Our compound gauges do not compromise accuracy and provides you with the same high accuracy specification on both positive and vacuum pressures. We offer a wide variety up to 300 psi (20 bar). If you need a higher range, just contact us and we can likely customize one to meet your need. We also offer absolute pressure sensors to 5K psi (350 bar) and a full range of differential pressure sensors from  $\pm 1$  inH<sub>2</sub>O ( $\pm 2.5$  mbar) to  $\pm 300$  inH<sub>2</sub>O ( $\pm 700$  mbar). Are you looking for a pressure gauge to use in hazardous areas? Our ATEX-certified intrinsically safe models (681IS) are designed for pressure measurement in hazardous areas.

If you need to panel mount our sensors, we offer the option (see ordering information) for a back-mounted pressure port and gauge housing designed to fit in a panel. And most recently, we've added the option to do stand-alone data logging with the 681. Now you can record more than 21,000 records internal to the 681 series. Each record includes date, time, pressure and temperature readings. Download the logged data with our free Additel/Land software or you can purchase our Additel/Log II for real-time logging and data analysis. The 681 series digital pressure gauges are unmatched in performance and reliability. Best of all, they are very affordable.

### FEATURES

- Pressure ranges to 40,000 psi (2,800 bar)
- 0.02% full scale accuracy (681-02)
- 0.05% full scale accuracy (681-05)
- 0.1% full scale accuracy (681-10)
- 0.2% full scale accuracy (681-20)
- 0.1% reading scale accuracy (681-RD)
- IP67 rated: Submersible in 1 meter of water(681IS)
- Fully temperature compensated accuracy from 14°F to 122°F (-10°C to 50°C)
- Up to eleven selectable pressure units
- Large, easy to read display with 5-digit resolution
- Backlit display
- % pressure indication with fan-shaped graph scale for visual reference
- Display flash warning when pressure over 120% of FS
- Bottom mount or panel mount
- ATEX certified intrinsically safe (Model 681IS)
- NIST traceable calibration with data(included)
- 9V battery power or AC adapter (optional)
- Data logging to 21,843 records (includes date, time, pressure and temperature)

## SPECIFICATIONS

### Model

ADT681: Regular gauge  
ADT681IS: ATEX certified intrinsically safe

### Accuracy

681(IS)-02 : 0.02% of full scale  
681(IS)-05 : 0.05% of full scale  
681(IS)-10 : 0.1% of full scale  
681(IS)-20 : 0.2% of full scale  
681(IS)-RD: 0% to 20% of Range: 0.02% of full scale  
20% to 110% of Range: 0.1% of reading  
Vacuum: 0.25% of full scale<sup>[1][2]</sup>

[1] FS = -14.5 psi

[2] Applicable ADT681-RD-CPX

(For detailed accuracy, please see pressure range table)

### Gauge Types

Gauge pressure                      Compound pressure  
Absolute pressure                  Differential pressure  
Barometric pressure

### Fan-shaped Graph Scale

Similar to analog dials, including pressure swing, % indication with fan-shaped graph scale for visual reference, low/high alarm.

### Display

Description: 5 full digit FSTN LCD  
Display rate: 3 readings per second (Default setting).  
Adjustable from 10 readings per second to 1 reading every ten seconds  
Numeral display height: 16.5mm (0.65")

### Pressure Units

Pa, kPa, MPa, psi, bar, mbar, kgf/cm<sup>2</sup>, inH<sub>2</sub>O@4°C  
mmH<sub>2</sub>O@4°C, inHg@0°C, mmHg@0°C

### Environmental

Compensated Temperature: 14°F to 122°F (-10°C to 50°C)  
Operating Temperature: 14°F to 122°F (-10°C to 50°C)  
Storage Temperature: -4°F to 158°F (-20°C to 70°C)  
Humidity: <95%

### Pressure Port

1/4NPT male, 1/2NPT male, 1/4BSP male, 1/2BSP male, M20x1.5 male (≤15,000 psi)  
1/4HP female or 1/4HP male (>15,000 PSI)

\*1/4HP female: Autoclave F-250-C, 9/16" - 18 UNF-2B

\*1/4HP male: Autoclave M-250-C, 9/16" - 18 UNF-2A

0.236 inch (Ø6 mm) test hose (for differential pressure)  
Other connections available per request

### Power

Battery: One 9V alkaline battery (included)  
Battery life:  
1. High power mode: 320 hours  
2. Low power mode: 300 hours (10 readings/s), 600 hours (3 reading/s), or 4000 hours (1 reading/10s)  
Power auto-off: 60 minutes power auto-off. Auto-off may be disable  
External power: 110/220V external power adapter (optional)

### Enclosure

Case material: Aluminum alloy  
Wetted parts: 316L SS  
Dimension: Ø110mm X 35mm depth X 176mm height (panel mount gauge: Ø140mm X 86mm depth)  
Weight: 0.6kg

### Compliance

Protection Level: IP67(available for 681IS GP15-40K)  
Vibration: 5g (20-2000 Hz)  
Shock Resistance: 100g/11ms

### Data Logging

Data storage: 21,843 records (each record includes date, time, pressure and temperature)  
Rate: user-selectable from 1 to 99,999 second intervals

### Intrinsic Safety and European Compliance

CE marked  
ATEX certified intrinsically safe (ADT681IS)  
⚠ II 1G EX ia IIC T4 Ga

### Communication: RS232

\*(Do not use the RS-232 connector in a hazardous atmosphere)

### Warranty: 1 year

### Pressure Ranges

Gauge Pressure <sup>[1]</sup>						
P/N	Pressure Range		Media <sup>[2]</sup>	Accuracy		Burst Pressure
	(psi)	(bar)		%FS	%RD	
V15	-15	-1.0	G	0.02 (0.05, 0.1, 0.2)	N/A	3x
GP2	2	0.16	G	0.05 (0.1, 0.2)	N/A	3x
GP5	5	0.35	G	0.05 (0.1, 0.2)	0.1	3x
GP10	10	0.7	G	0.02 (0.05, 0.1, 0.2)	0.1	3x
GP15	15	1.0	G, L <sup>[3]</sup>	0.02 (0.05, 0.1, 0.2)	0.1	3x
GP30	30	2.0	G, L <sup>[3]</sup>	0.02 (0.05, 0.1, 0.2)	0.1	3x
GP50	50	3.5	G, L	0.02 (0.05, 0.1, 0.2)	0.1	3x
GP100	100	7.0	G, L	0.02 (0.05, 0.1, 0.2)	0.1	3x
GP150	150	10	G, L	0.02 (0.05, 0.1, 0.2)	0.1	3x
GP300	300	20	G, L	0.02 (0.05, 0.1, 0.2)	0.1	3x
GP500	500	35	G, L	0.02 (0.05, 0.1, 0.2)	0.1	3x
GP600	600	40	G, L	0.02 (0.05, 0.1, 0.2)	0.1	3x
GP1K	1,000	70	G, L	0.02 (0.05, 0.1, 0.2)	0.1	3x
GP2K	2,000	140	G, L	0.02 (0.05, 0.1, 0.2)	0.1	3x
GP3K	3,000	200	G, L	0.02 (0.05, 0.1, 0.2)	0.1	3x
GP5K	5,000	350	G, L	0.02 (0.05, 0.1, 0.2)	0.1	3x
GP10K	10,000	700	G, L	0.02 (0.05, 0.1, 0.2)	0.1	3x
GP15K	15,000	1,000	G, L	0.05 (0.1,0.2)	0.1	2x
GP20K	20,000	1,400	G, L	0.05 (0.1,0.2)	N/A	1.5x
GP25K	25,000	1,600	G, L	0.1 (0.2)	N/A	1.5x
GP30K	30,000	2,000	G, L	0.1 (0.2)	N/A	1.5x
GP36K	36,000	2,500	G, L	0.1 (0.2)	N/A	1.5x
GP40K	40,000	2,800	G, L	0.1 (0.2)	N/A	1.1x

[1] Sealed gauge pressure for above 1,000 psi

[2] G=Gas, L=Liquid

[3] 0.02% FS for gas media only

## Additel 681 Digital Pressure Gauges



Absolute Pressure					
P/N	Pressure Range		Media [1]	Accuracy(%FS)	Burst Pressure
	(psi)	(bar)			
AP5	5	0.35	G	0.1 (0.2)	3x
AP10	10	0.7	G	0.1 (0.2)	3x
AP15	15	1.0	G	0.1 (0.2)	3x
AP30	30	2.0	G	0.1 (0.2)	3x
AP50	50	3.5	G	0.1 (0.2)	3x
AP100	100	7.0	G, L	0.05 (0.1, 0.2)	3x
AP300	300	20	G, L	0.05 (0.1, 0.2)	3x
AP500	500	35	G, L	0.05 (0.1, 0.2)	3x
AP1K	1,000	70	G, L	0.05 (0.1, 0.2)	3x
AP3K	3,000	200	G, L	0.05 (0.1, 0.2)	3x
AP5K	5,000	350	G, L	0.05 (0.1, 0.2)	3x

[1] G=Gas, L=Liquid

Differential Pressure						
P/N	Pressure Range		Media	Accuracy (%FS) <sup>[1]</sup>	Burst Pressure	Static Pressure Range
	(inH <sub>2</sub> O)	(mbar)				
DP1	±1	±2.5	G	0.05 <sup>[2]</sup>	100x	±10 psi
DP2	±2	±5.0	G	0.05 <sup>[2]</sup>	100x	±10 psi
DP5	±5	±10	G	0.05 <sup>[2]</sup>	50x	±10 psi
DP10	±10	±25	G	0.05 <sup>[2]</sup>	20x	±10 psi
DP20	±20	±50	G	0.05	20x	±10 psi
DP30	±30	±75	G	0.05	20x	±10 psi
DP50	±50	±160	G	0.05	3x	±10 psi
DP150	±150	±350	G	0.02 (0.05)	3x	50 psi
DP300	±300	±700	G	0.02 (0.05)	3x	50 psi

[1] FS specification applies to the span of the range. Accuracy includes one year stability.

[2] 0.05%FS accuracy (incl 6 months stability). One year accuracy is 0.05%FS calibration accuracy combined with 0.05%FS one year stability.

Compound Pressure <sup>[1]</sup>						
P/N	Pressure Range		Media [2]	Accuracy		Burst Pressure
	(psi)	(bar)		%FS <sup>[3]</sup>	%RD	
CP2	±2	±0.16	G	0.05 (0.1,0.2)	N/A	3x
CP5	±5	±0.35	G	0.02 (0.05,0.1,0.2)	0.1	3x
CP10	±10	±0.7	G	0.02 (0.05,0.1,0.2)	0.1	3x
CP15	±15	±1	G	0.02 (0.05,0.1,0.2)	0.1	3x
CP30	-15 to 30	-1 to 2	G	0.02 (0.05,0.1,0.2)	0.1	3x
CP100	-15 to 100	-1 to 7	G, L	0.02 (0.05,0.1,0.2)	0.1	3x
CP300	-15 to 300	-1 to 20	G, L	0.02 (0.05,0.1,0.2)	0.1	3x

[1] Sealed gauge pressure for above 1,000 psi.

[2] G=Gas, L=Liquid


[3] FS specification applies to the span of the range.

Barometric Pressure					
P/N	Pressure Range		Media	Accuracy	Burst Pressure
	Low	High			
BP	60 kPa	110 kPa	G	40 Pa	3x

### ORDERING INFORMATION



#### Model Number

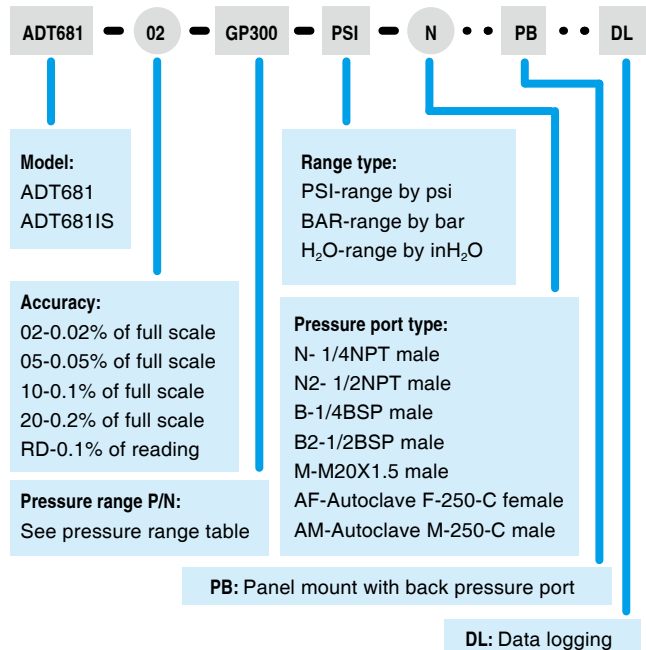

#### Accessories included

- Rubber boot (Except panel mount)
- 9V alkaline battery (1 pc)
- Manual
- NIST traceable calibration certificate

#### Optional Accessories

Model number	Description
9812	110V/220V external power adapter (DC 9V) for 681 digital pressure gauge.
9502	Additel/Log II real time data logging and graphical software for 681 and 672.
9506	Additel/PCal pressure calibration software
9050	USB to RS232 (DB9/M) Adapter
9050-EXT	RS 232 (DB9/M) extension cable, 9 feet
9900-681	Carrying Case for one 681 digital pressure gauge
9251	Rubber boot for ADT681

Note: For oil-free applications contact Additel.